


AC-3100/3101/3102 Quick Reference Guide

1 Installing your All-in-One ACU with default settings:
 - Maglock used to lock door.

2 Drill the required holes using the paper template provided. Plug the mounting points if needed, feed the pigtail through the centre hole and mount the ACU to the wall.

3 Connect the ACU as shown in the wiring diagram. Program the ACU using the table below:

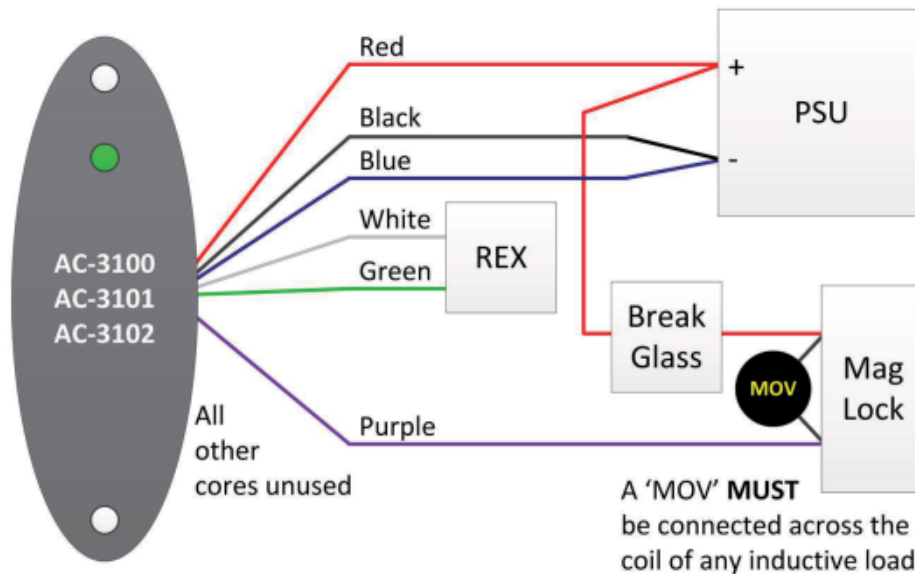

Select Door Release Mode	Power up ACU. Red LED = Pulse Mode Press REX (short Green & White) Green / Orange LED = Latch Mode
Programming Mode	Present and hold Master Card. <i>Beep Beep</i> LED = Orange Remove Master Card
Add Cards	Present card, <i>beep</i> present new card, <i>beep</i> etc. until all cards are programmed.
Exit Programming Mode	Present and hold the Master Card OR Do not use ACU for 30 seconds

For other options, please refer to the AC-310x Installation Instructions (available from www.controlsoft.com)