


# AC-3210 Quick Reference Guide

- 1** Installing your AC-3210 with default settings:
- No Fire Alarm integration.
  - No Door Open alarm.

- 2** Remove the front cover. Mount the base, and connect as shown in the wiring diagram below:

- 3** Program the system using the table below:  
Fit cover when programmed.

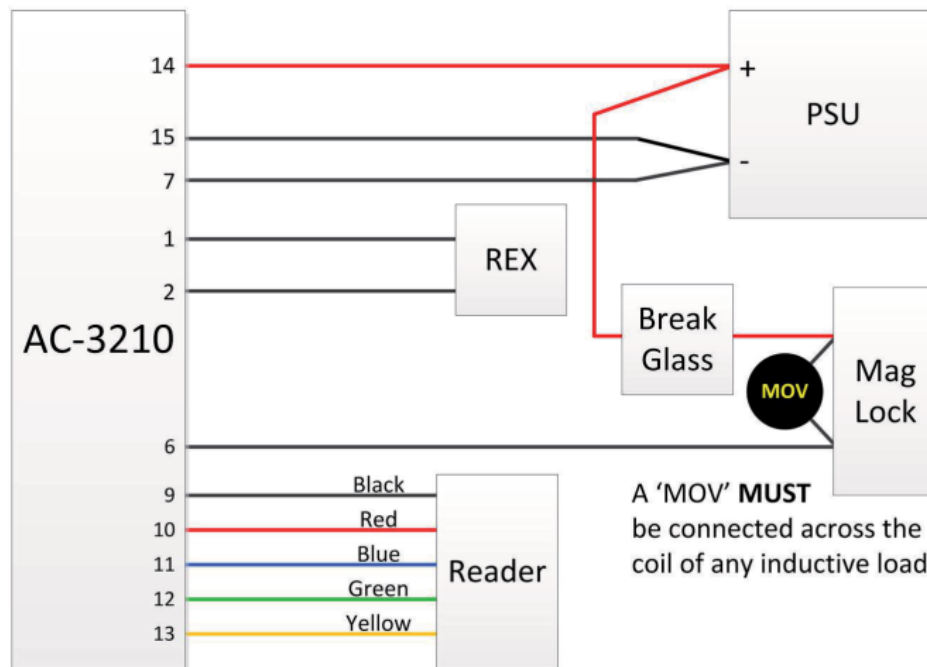

Enrol Master Card <b>Enrolling a Master Card resets the controller back to Factory Defaults</b>	Press S2 & S1 at same time. <i>Beep beep beep 0.0.0.</i> Present card to reader.
Enrol Users	Present Master Card to reader <i>Beep, beep beep beep</i> Single dot on display Present card <i>beep</i> Present card <i>beep</i> Present card <i>beep</i> etc
Door Release Time	Press S1 t1 = 1 sec (Default Value) Press S1 t2 = 2 secs etc. up to t9 = 9 secs
Exit Programming Mode	Do not touch controller for 30 seconds

For other options, please refer to the AC-3210 Installation Instructions (available from [www.controlsoft.com](http://www.controlsoft.com))